

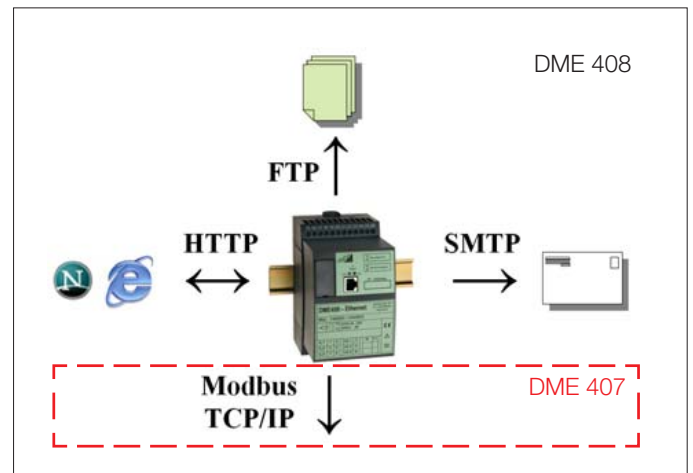
SINEAX DME 407 / 408

Energy Management in 3-phase Systems

Application

The devices may be used for any remote application to record state informations and billing data for power feeders, distributions or specific loads in electrical systems. They can be connected via intranet or internet. For an on-site display the devices can be used along with the display unit A200, which visualizes all state information via high-contrast LED displays.

All described functions are combined in a DME 408. To use it in superior systems using the "Modbus over TCP/IP" protocol not all functions are really needed. The DME 407 therefore doesn't support mail and file transfer and provides no measurand acquisition via browser.



Main Features

- Accurate reporting (class 0.2) of the present system state
- Recording energy consumption and billing data (load profiles, meters)
- Remote acquisition of measurement data via Ethernet using WEB-Browser (http), file transfer (ftp) or Modbus over TCP/IP protocol
- Acquisition of mean values for any desired measurand with trend calculation and logging of their progression
- Monitoring alarm limits: Alarming via E-Mail (smtp)
- Periodical transmission of measurement data via E-Mail
- Functionally separated configuration of the installation bound measuring task and the analysis of measurement data via Ethernet
- Built-in, synchronizable realtime clock for time stamping of measurands

Ethernet Demos


Visit the ethernet demos on our homepage. A DME 408 is arranged in the mains input of our factory and delivers online energy consumption data via WEB browser. Additionally a downloadable application software shows the capabilities of measurement acquisition and analysis using the Modbus over TCP/IP interface.

Accuracy

| | |
|-------------------------|--------------------|
| State measurands: | Class 0.2 |
| Active energy meters: | Class 1 (IEC 1036) |
| Reactive energy meters: | Class 2 (IEC 1268) |

Technical Data

| | |
|---------------------|--------------------|
| Ethernet connector: | RJ45 |
| Physical layer: | 10/100 Base-T |
| Power supply: | AC/DC 85 ... 230 V |

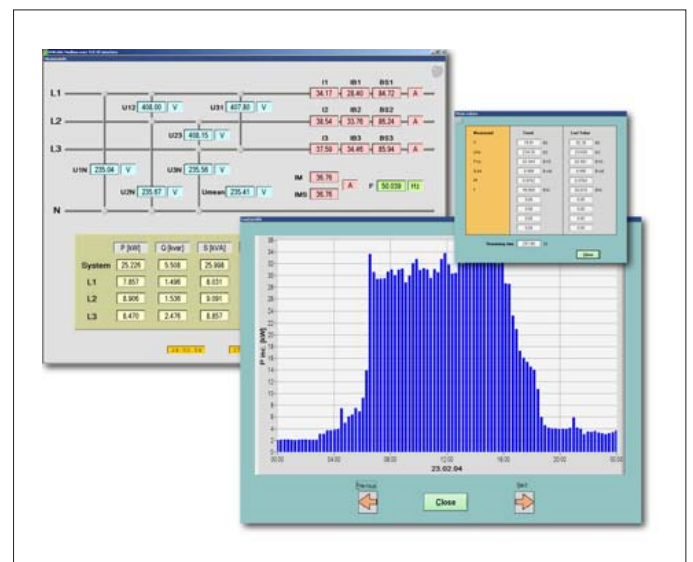

SINEAX DME 407 / 408

Energy Management in 3-phase Systems

Symbols

| Symbols | Meaning | Symbols | Meaning (continuation) |
|-----------|--|---------|---|
| X | Measured variable | Q2 | Reactive power phase 2 (phase-to-neutral L2 – N) |
| U | Input voltage | Q3 | Reactive power phase 3 (phase-to-neutral L3 – N) |
| Ur | Rated value of the input voltage | S | Apparent power of the system $S = \sqrt{I_1^2 + I_2^2 + I_3^2} \cdot \sqrt{U_1^2 + U_2^2 + U_3^2}$ |
| U 12 | Phase-to-phase voltage L1 – L2 | S1 | Apparent power phase 1 (phase-to-neutral L1 – N) |
| U 23 | Phase-to-phase voltage L2 – L3 | S2 | Apparent power phase 2 (phase-to-neutral L2 – N) |
| U 31 | Phase-to-phase voltage L3 – L1 | S3 | Apparent power phase 3 (phase-to-neutral L3 – N) |
| U1N | Phase-to-neutral voltage L1 – N | Sr | Rated value of the apparent power of the system |
| U2N | Phase-to-neutral voltage L2 – N | PF | Active power factor $\cos\varphi = P/S$ |
| U3N | Phase-to-neutral voltage L3 – N | PF1 | Active power factor phase 1 P1/S1 |
| UM | Average value of the voltages (U1N + U2N + U3N) / 3 | PF2 | Active power factor phase 2 P2/S2 |
| I | Input current | PF3 | Active power factor phase 3 P3/S3 |
| I1 | AC current L1 | QF | Reactive power factor $\sin\varphi = Q/S$ |
| I2 | AC current L2 | QF1 | Reactive power factor phase 1 Q1/S1 |
| I3 | AC current L3 | QF2 | Reactive power factor phase 2 Q2/S2 |
| Ir | Rated value of the input current | QF3 | Reactive power factor phase 3 Q3/S3 |
| IM | Average value of the currents (I1 + I2 + I3) / 3 | LF | Power factor of the system $LF = \text{sgn}Q \cdot (1 - PF)$ |
| IMS | Average value of the currents and sign of the active power (P) | LF1 | Power factor phase 1 $\text{sgn}Q1 \cdot (1 - PF1)$ |
| IB | RMS value of the current with wire setting range (bimetal measuring function) | LF2 | Power factor phase 2 $\text{sgn}Q2 \cdot (1 - PF2)$ |
| BS | Slave pointer function for the measurement of the RMS value IB | LF3 | Power factor phase 3 $\text{sgn}Q3 \cdot (1 - PF3)$ |
| φ | Phase-shift between current and voltage | H | Power supply |
| F | Frequency of the input variable | Hn | Rated value of the power supply |
| P | Active power of the system $P = P1 + P2 + P3$ | | |
| P1 | Active power phase 1 (phase-to-neutral L1 – N) | | |
| P2 | Active power phase 2 (phase-to-neutral L2 – N) | | |
| P3 | Active power phase 3 (phase-to-neutral L3 – N) | | |
| Q | Reactive power of the system $Q = Q1 + Q2 + Q3$ | | |
| Q1 | Reactive power phase 1 (phase-to-neutral L1 – N) | | |

SINEAX DME 407 / 408

Energy Management in 3-phase Systems

Applicable standards and regulations

| | |
|---|--|
| IEC 688 resp. EN 60 688 | Electrical measuring transducers for converting AC electrical variables into analogue and digital signals |
| IEC 1010 resp. EN 61 010 | Safety regulations for electrical measuring control and laboratory equipment |
| IEC 529 resp. EN 60 529 | Protection types by case (code IP) |
| IEC 255-4 Part. E5 | High-frequency disturbance test (static relays only) |
| IEC 1000-4-2/-3/-4/-6 | Electromagnetic compatibility for industrial-process measurement and control equipment |
| EN 55 011 | Electromagnetic compatibility of data processing and telecommunication equipment Limits and measuring principles for radio interference and information equipment |
| IEC 68-2-1/-2/-3/-6/-27 resp. EN 60 068-2-1/-2/-3/-6/-27 | Ambient tests -1 Cold, -2 Dry heat, -3 Damp heat, -6 Vibration, -27 Shock |
| DIN 40 110 | AC quantities |
| DIN 43 807 | Terminal markings |
| IEC 1036 | Alternating current static watt-hour meters for active energy (classes 1 and 2) |
| UL 94 | Tests for flammability of plastic materials for parts in devices and appliances |

Overload capacity:

Current circuit 10 A
400 V at single-phase AC system
resp. 693 V at three-phase system
Voltage circuit
480 V at single-phase AC system
resp. 831 V at three-phase system

Continuous thermal ratings of inputs

| | |
|------------------------|--|
| Current circuit | 10 A 400 V single-phase AC system 693 V three-phase system |
| Voltage circuit | 480 V single-phase AC system 831 V three-phase system |

Short-time thermal rating of inputs

| Input variable | Number of inputs | Duration of overload | Interval between two overloads |
|---|--|----------------------|--------------------------------|
| Current circuit | 400 V single-phase AC system 693 V three-phase system | | |
| 100 A | 5 | 3 s | 5 min. |
| 250 A | 1 | 1 s | 1 hour |
| Voltage circuit | 1 A, 2 A, 5 A | | |
| Single-phase AC system 600 V $H_{\text{intern}}: 1.5 U_r$ | 10 | 10 s | 10 s |
| Three-phase system 1040 V $H_{\text{intern}}: 1.5 U_r$ | 10 | 10 s | 10 s |

Technical Data

➔ Measuring input

| | |
|------------------------|--|
| Rated frequency: | 50, 60 or 16 2/3 Hz |
| Nominal input voltage: | 57 to 400 V (phase-to-neutral) resp. 100 to 693 V (phase-to-phase) |
| Nominal input current: | 1 to 6 A |
| Consumption [VA]: | Voltage circuit: $U^2 / 400 \text{ k}\Omega$ Current circuit : $\leq I^2 \cdot 0.01 \text{ }\Omega$ |

Ethernet Interface

| | |
|------------------------------|---|
| Bus connections: | RJ45 |
| Physical Layer: | 10/100 Base-T |
| IP address: | 192.168.57.240, settable via browser |
| Max. length of bus: | 2500 m |
| Interface: | Electrically insulated (500 V) |
| Configuration possibilities: | Locally from a PC, or via ethernet |

SINEAX DME 407 / 408

Energy Management in 3-phase Systems

Table 1: Measurands available via Ethernet Interface

| Sym- bols | Meaning | Application | | |
|--------------|---|-------------------|-----|--------------|
| | | A11 ... A16 | A34 | A24 / A44 |
| U | Input voltage | ● | — | — |
| U12 | Phase-to-phase voltage L1 – L2 | — | ● | ● |
| U23 | Phase-to-phase voltage L2 – L3 | — | ● | ● |
| U31 | Phase-to-phase voltage L3 – L1 | — | ● | ● |
| U1N | Phase-to-neutral voltage L1 – N | — | — | ● |
| U2N | Phase-to-neutral voltage L2 – N | — | — | ● |
| U3N | Phase-to-neutral voltage L3 – N | — | — | ● |
| UM | Average value of the voltages | — | — | ● |
| I | Input current | ● | — | — |
| I1 | AC current L1 | — | ● | ● |
| I2 | AC current L2 | — | ● | ● |
| I3 | AC current L3 | — | ● | ● |
| IM | Average value of the currents | — | ● | ● |
| IMS | Average value of the currents and sign of the active power | — | ● | ● |
| IB | RMS value of the current with wire setting range (bimetal measuring function) | ● | — | — |
| IB1 | RMS value of the current with wire setting range (bimetal measuring function), phase 1 | — | ● | ● |
| IB2 | RMS value of the current with wire setting range (bimetal measuring function), phase 2 | — | ● | ● |
| IB3 | RMS value of the current with wire setting range (bimetal measuring function), phase 3 | — | ● | ● |
| BS | Slave pointer function for the measurement of the RMS value IB | ● | — | — |
| BS1 | Slave pointer function for the measurement of the RMS value IB, phase 1 | — | ● | ● |
| BS2 | Slave pointer function for the measurement of the RMS value IB, phase 2 | — | ● | ● |

| Sym- bols | Meaning | Application | | |
|--------------|---|-------------------|-----|--------------|
| | | A11 ... A16 | A34 | A24 / A44 |
| BS3 | Slave pointer function for the measurement of the RMS value IB, phase 3 | — | ● | ● |
| F | Frequency of the input variable | ● | ● | ● |
| P | Active power of the system | ● | ● | ● |
| P1 | Active power phase 1 (phase-to-neutral L1 – N) | — | — | ● |
| P2 | Active power phase 2 (phase-to-neutral L2 – N) | — | — | ● |
| P3 | Active power phase 3 (phase-to-neutral L3 – N) | — | — | ● |
| PF | Active power factor $\cos\varphi = P/S$ | ● | ● | ● |
| PF1 | Active power factor phase 1, P1/S1 | — | — | ● |
| PF2 | Active power factor, phase 2, P2/S2 | — | — | ● |
| PF3 | Active power factor, phase 3, P3/S3 | — | — | ● |
| Q | Reactive power of the system | ● | ● | ● |
| Q1 | Reactive power, phase 1 (phase-to-neutral L1 – N) | — | — | ● |
| Q2 | Reactive power, phase 2 (phase-to-neutral L2 – N) | — | — | ● |
| Q3 | Reactive power, phase 3 (phase-to-neutral L3 – N) | — | — | ● |
| S | Apparent power of the system | ● | ● | ● |
| S1 | Apparent power, phase 1 (phase-to-neutral L1 – N) | — | — | ● |
| S2 | Apparent power, phase 2 (phase-to-neutral L2 – N) | — | — | ● |
| S3 | Apparent power, phase 3 (phase-to-neutral L3 – N) | — | — | ● |
| LF | Power factor of the system | ● | ● | ● |
| LF1 | Power factor, phase 1 | — | — | ● |
| LF2 | Power factor, phase 2 | — | — | ● |
| LF3 | Power factor, phase 3 | — | — | ● |

Continuation of Table 1 see on next page!

SINEAX DME 407 / 408

Energy Management in 3-phase Systems

Continuation of Table 1:

| Sym-bols | Meaning | Application | | |
|----------|--|-------------------|-----|--------------|
| | | A11 ... A16 | A34 | A24 / A44 |
| QF | Reactive power factor $\sin\varphi = Q/S$ | ● | ● | ● |
| QF1 | Reactive power factor phase 1, Q1/S1 | — | — | ● |
| QF2 | Reactive power factor phase 2, Q2/S2 | — | — | ● |
| QF3 | Reactive power factor phase 3, Q3/S3 | — | — | ● |
| | Power meter 1 ... 4 | ● | ● | ● |
| | Average values 1 ... 10 | ● | ● | ● |

For the average values 1 ... 10 their progression and trend is also available.

Where c.t.'s and/or v.t.'s are used for measurement, the values are referred to the primaries of the transformers.

Reference conditions

| | |
|-------------------------|--------------------------------|
| Ambient temperature: | 15 ... 30 °C |
| Input variable: | Rated useful range |
| Power supply: | H = H _n ± 1% |
| Active/reactive factor: | cosφ = 1 resp. sinφ = 1 |
| Frequency: | 50 ... 60 Hz, 16 2/3 Hz |
| Waveform: | Sinusoidal, form factor 1.1107 |
| Miscellaneous: | EN 60 688 |

System response

| | |
|--------------------|--|
| Accuracy class: | 0.2 resp. 0.4 (phase shift applications) Active energy meters class 1, acc. IEC 1036 (0.1 I _r ≤ I ≤ 1.5 I _r) Reactive energy meters class 2, acc. IEC 1268 (0.1 I _r ≤ I ≤ 1.5 I _r) |
| Measurement cycle: | Depending on application |
| Response time: | 1 ... 2 times measurement cycle |

Influencing quantities and permissible variations

Acc. to EN 60 688

Electrical safety

| | |
|-----------------------|------------------------------------|
| Protection class: | II |
| Enclosure protection: | IP 40, housing IP 20, terminals |
| Overvoltage category: | III |

Insulation test:

| | |
|----------------|----------------------|
| Input voltage: | AC 400 V |
| Input current: | AC 400 V |
| Output: | DC 40 V |
| Power supply: | AC 400 V DC 230 V |

Surge test:

5 kV; 1.2/50 μs; 0.5 Ws

Test voltage:

50 Hz, 1 min. acc. to EN 61 010-1
5550 V, inputs versus all other circuits as well as outer surface
3250 V, input circuits versus each other
3700 V, power supply versus outputs and SCI as well as outer surface
490 V, outputs and SCI versus each other and versus outer surface

Power supply →○


DC, AC power pack (DC or 50 ... 60 Hz)

| Rated voltage U _N | Tolerance |
|------------------------------|-------------------------------|
| 85 ... 230 V DC, AC | DC – 15 ... + 33% AC ± 10% |

Consumption: ≤ 9 W resp. ≤ 10 VA

Programming connector on transducer

| | |
|--------------|----------|
| Interface: | RS 232 C |
| DSUB socket: | 9-pin |

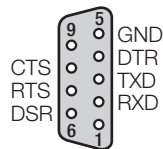

The interface is electrically insulated from all other circuits.

Installation data

| | |
|-------------------|---|
| Housing: | Housing T24 See Section "Dimensioned drawings" |
| Housing material: | Lexan 940 (polycarbonate), flammability class V-0 acc. to UL 94, self-extinguishing, non-dripping, free of halogen |
| Mounting: | For snapping onto top-hat rail (35 × 15 mm or 35 × 7.5 mm) acc. to EN 50 022 or directly onto a wall or panel using the pull-out screw hole brackets |
| Orientation: | Any |
| Weight: | Approx. 0.7 kg |

SINEAX DME 407 / 408

Energy Management in 3-phase Systems

Terminals

| | |
|------------------|---|
| Type: | Screw terminals with wire guards |
| Max. wire gauge: | ≤ 4.0 mm ² single wire or 2 × 2.5 mm ² fine wire |

Ambient tests

| | |
|----------------------|--|
| EN 60 068-2-6: | Vibration |
| Acceleration: | ± 2 g |
| Frequency range: | 10 ... 150 ... 10 Hz, rate of frequency sweep: 1 octave/minute |
| Number of cycles: | 10, in each of the three axes |
| EN 60 068-2-27: | Shock |
| Acceleration: | 3 × 50 g 3 shocks each in 6 directions |
| EN 60 068-2-1/-2/-3: | Cold, dry heat, damp heat |

Ambient conditions

| | |
|--|--------------------------------------|
| Variations due to ambient temperature: | ± 0.2% / 10 K |
| Nominal range of use for temperature: | 0...15...30...45 °C (usage group II) |
| Operating temperature: | – 10 to + 55 °C |
| Storage temperature: | – 40 to + 85 °C |
| Annual mean relative humidity: | ≤ 75% |
| Altitude: | 2000 m max. |
| Indoor use statement | |

Table 2: Ordering information

The following device versions are available as standard versions. It is only necessary to quote the Order No.:



| DESCRIPTION | Order No. |
|--|-----------|
| Mechanical design Housing T24 for rail and wall mounting | |
| Rated frequency 50 Hz | |
| Power supply 85 ... 230 V DC/AC | |
| Device type | |
| DME 407, german/english | 154 930 |
| DME 407, french/english | 154 948 |
| DME 408, german/english | 152 843 |
| DME 408, french/english | 149 329 |

The language versions apply to the available languages for the configuration interface via internet browser.

SINEAX DME 407 / 408

Energy Management in 3-phase Systems

Electrical connections

| Function | Connection |
|--|----------------------|
| Measuring input  | AC current IL1 1 / 3 |
| | IL2 4 / 6 |
| | IL3 7 / 9 |
| | AC voltage UL1 2 |
| | UL2 5 |
| | UL3 8 |
| | N 11 |
| Default IP | 15 16 |
| Power supply  | AC ~ 13 |
| | ~ 14 |
| | DC + 13 |
| | - 14 |

If power supply is taken from the measured voltage internal connections are as follow:

| Application (system) | Internal connection Terminal / System |
|--|---------------------------------------|
| Single-phase AC current | 2 / 11 (L1 - N) |
| 4-wire 3-phase symmetric load | 2 / 11 (L1 - N) |
| All other (apart from A15 / A16 / A24) | 2 / 5 (L1 - L2) |

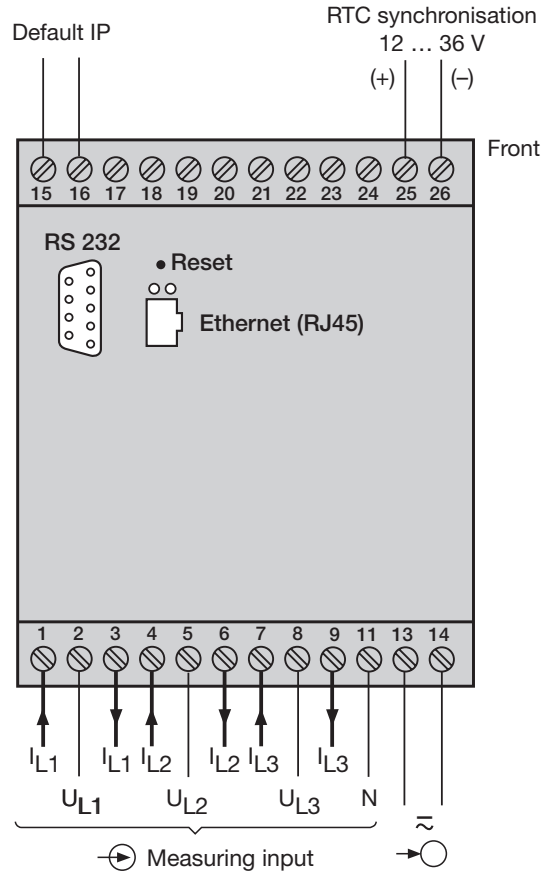
Default-IP

If terminals 15 and 16 are short-circuited during power-on the device will use the IP address 192.168.57.240.

RTC synchronization


The system time can be synchronized to the network frequency by applying an optional voltage (12...36 V~) on terminals 25 and 26.

The synchronization may also be performed by means of minute-pulses (12...36 V=).



Reset

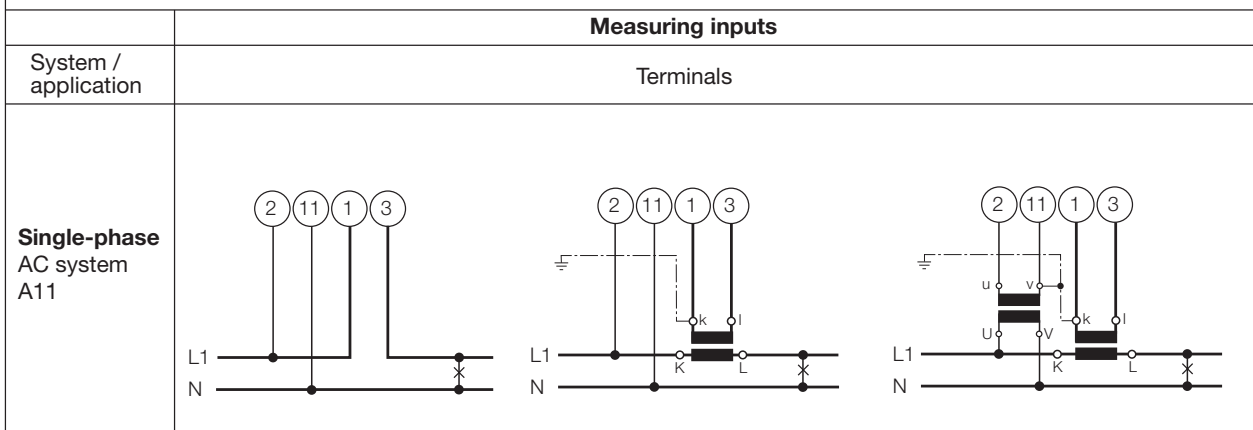If i.e. the network parameters set no longer allow to access the device a reset of all parameters will be necessary. To do so you have to break through the foil of the label at the market position. To press the underlying reset button you need a pin of at least 10 mm length and max. 1.2 mm diameter. The button must be pressed on power-up for about 3s. Because all adjusted options and configuration settings are lost during reset perform this step only if absolutely necessary.













SINEAX DME 407 / 408

Energy Management in 3-phase Systems

| Measuring inputs | | | | | | | | | | | | | | | | | | |
|--|--|-----------------|-----------|----|----|----|----|---|----|----|----|----|----|----|----|----|----|----|
| System / application | Terminals | | | | | | | | | | | | | | | | | |
| 3-wire 3-phase symmetric load I: L1 A13 | <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>2</th> <th>5</th> <th>8</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1</td> <td>3</td> <td>L2</td> <td>L3</td> <td>L1</td> </tr> <tr> <td>L3</td> <td>1</td> <td>3</td> <td>L3</td> <td>L1</td> <td>L2</td> </tr> </tbody> </table> | Current transf. | Terminals | 2 | 5 | 8 | L2 | 1 | 3 | L2 | L3 | L1 | L3 | 1 | 3 | L3 | L1 | L2 |
| Current transf. | Terminals | 2 | 5 | 8 | | | | | | | | | | | | | | |
| L2 | 1 | 3 | L2 | L3 | L1 | | | | | | | | | | | | | |
| L3 | 1 | 3 | L3 | L1 | L2 | | | | | | | | | | | | | |
| 3-wire 3-phase symmetric load phase-shift U: L1 – L2 I: L1 A12 | <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>2</th> <th>5</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1</td> <td>3</td> <td>L2</td> <td>L3</td> </tr> <tr> <td>L3</td> <td>1</td> <td>3</td> <td>L3</td> <td>L1</td> </tr> </tbody> </table> | Current transf. | Terminals | 2 | 5 | L2 | 1 | 3 | L2 | L3 | L3 | 1 | 3 | L3 | L1 | | | |
| Current transf. | Terminals | 2 | 5 | | | | | | | | | | | | | | | |
| L2 | 1 | 3 | L2 | L3 | | | | | | | | | | | | | | |
| L3 | 1 | 3 | L3 | L1 | | | | | | | | | | | | | | |
| 3-wire 3-phase symmetric load phase-shift U: L3 – L1 I: L1 A15 | <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>8</th> <th>2</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1</td> <td>3</td> <td>L1</td> <td>L2</td> </tr> <tr> <td>L3</td> <td>1</td> <td>3</td> <td>L2</td> <td>L3</td> </tr> </tbody> </table> | Current transf. | Terminals | 8 | 2 | L2 | 1 | 3 | L1 | L2 | L3 | 1 | 3 | L2 | L3 | | | |
| Current transf. | Terminals | 8 | 2 | | | | | | | | | | | | | | | |
| L2 | 1 | 3 | L1 | L2 | | | | | | | | | | | | | | |
| L3 | 1 | 3 | L2 | L3 | | | | | | | | | | | | | | |


SINEAX DME 407 / 408

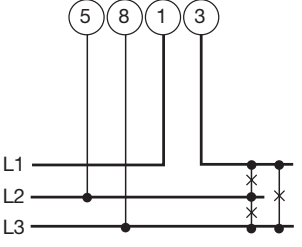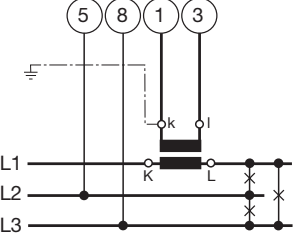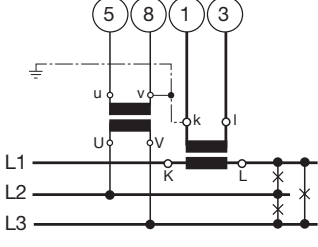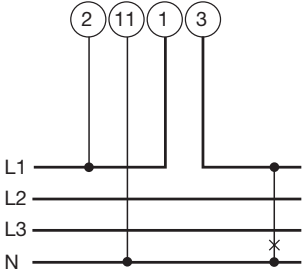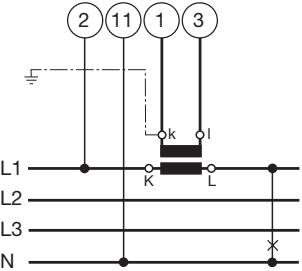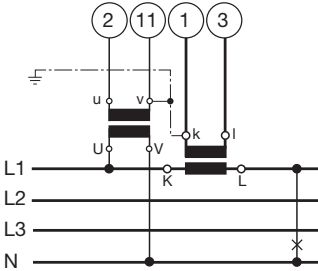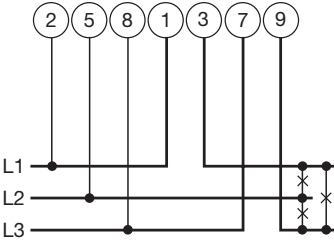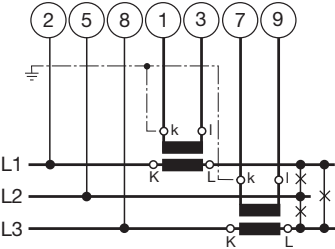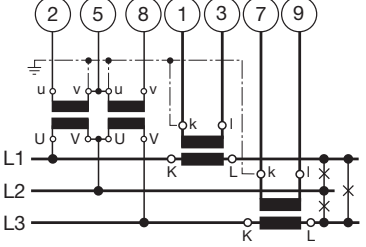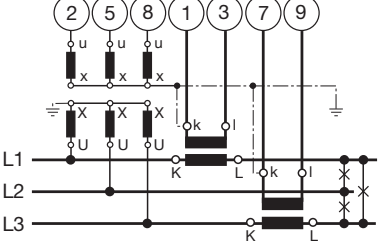Energy Management in 3-phase Systems


| Measuring inputs | | | | | | | | | | | | | |
|---|--|-----------------|-----------|---|----|----|-------|----|----|----|-------|----|----|
| System / application | Terminals | | | | | | | | | | | | |
| <p>3-wire 3-phase symmetric load phase-shift U: L2 – L3 I: L1 A16</p> | <div style="display: flex; justify-content: space-around;">    </div> <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>5</th> <th>8</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1 3</td> <td>L3</td> <td>L1</td> </tr> <tr> <td>L3</td> <td>1 3</td> <td>L1</td> <td>L2</td> </tr> </tbody> </table> | Current transf. | Terminals | 5 | 8 | L2 | 1 3 | L3 | L1 | L3 | 1 3 | L1 | L2 |
| Current transf. | Terminals | 5 | 8 | | | | | | | | | | |
| L2 | 1 3 | L3 | L1 | | | | | | | | | | |
| L3 | 1 3 | L1 | L2 | | | | | | | | | | |
| <p>4-wire 3-phase symmetric load I: L1 A14</p> | <div style="display: flex; justify-content: space-around;">    </div> <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Current transf.</th> <th>Terminals</th> <th>2</th> <th>11</th> </tr> </thead> <tbody> <tr> <td>L2</td> <td>1 3</td> <td>L2</td> <td>N</td> </tr> <tr> <td>L3</td> <td>1 3</td> <td>L3</td> <td>N</td> </tr> </tbody> </table> | Current transf. | Terminals | 2 | 11 | L2 | 1 3 | L2 | N | L3 | 1 3 | L3 | N |
| Current transf. | Terminals | 2 | 11 | | | | | | | | | | |
| L2 | 1 3 | L2 | N | | | | | | | | | | |
| L3 | 1 3 | L3 | N | | | | | | | | | | |
| <p>3-wire 3-phase asymmetric load A34</p> | <div style="display: flex; flex-direction: column;">     </div> | | | | | | | | | | | | |

SINEAX DME 407 / 408

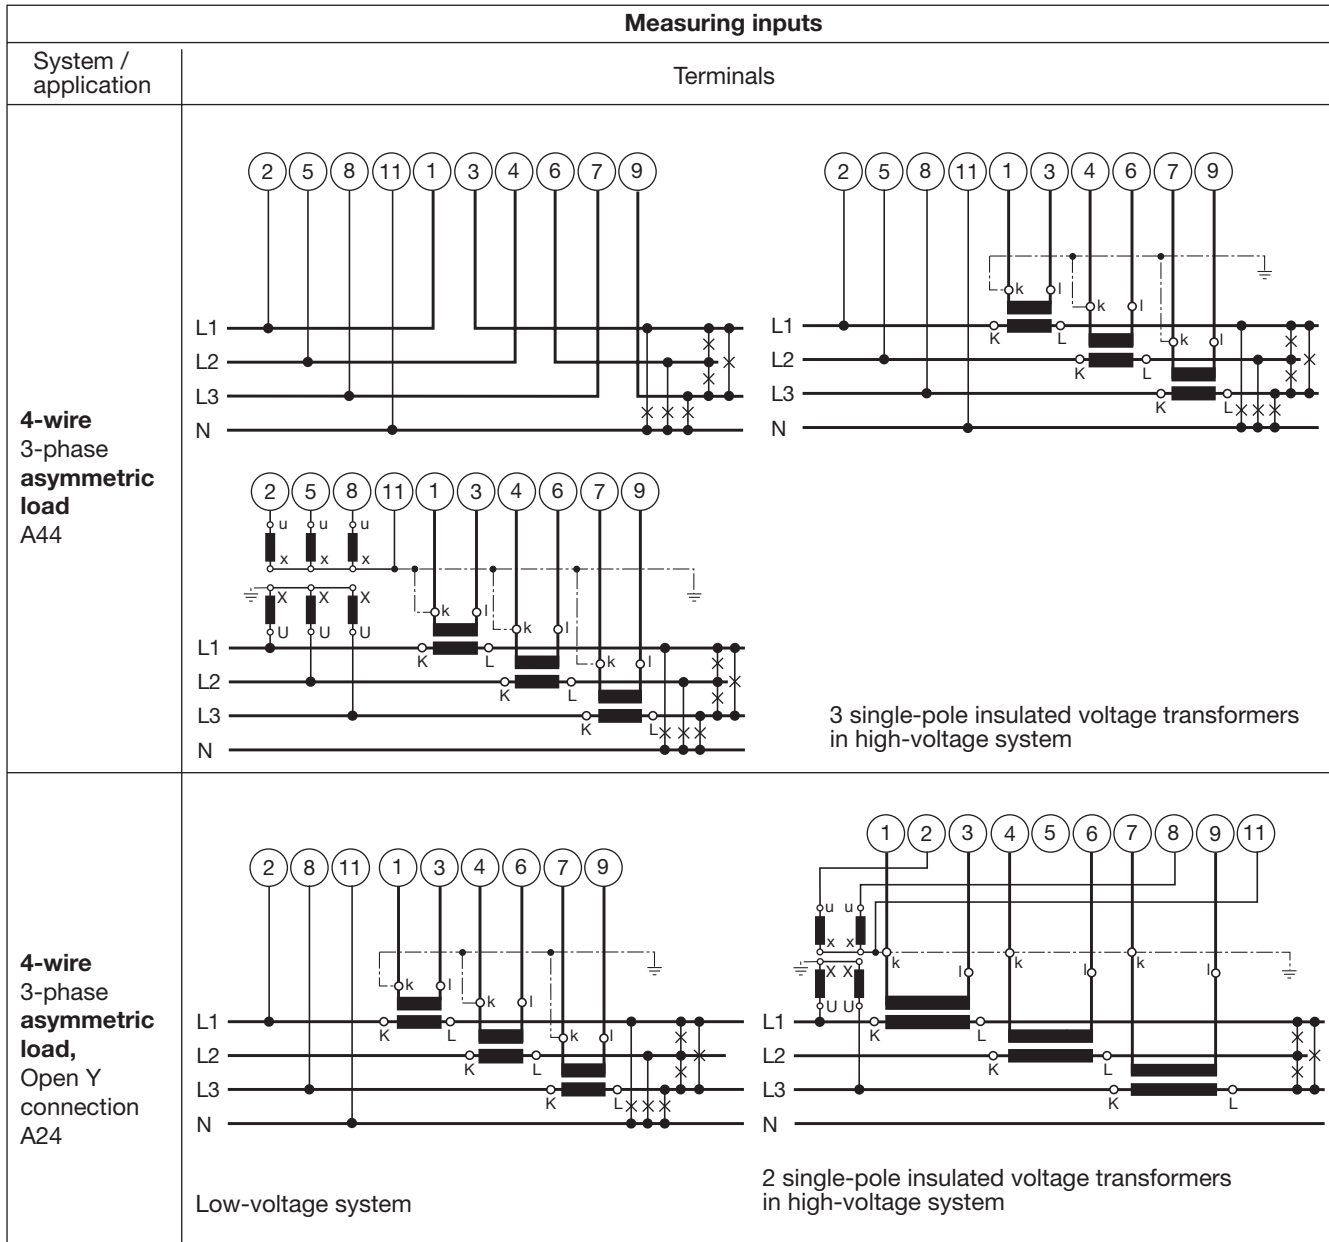Energy Management in 3-phase Systems




Difference between PF, QF and LF

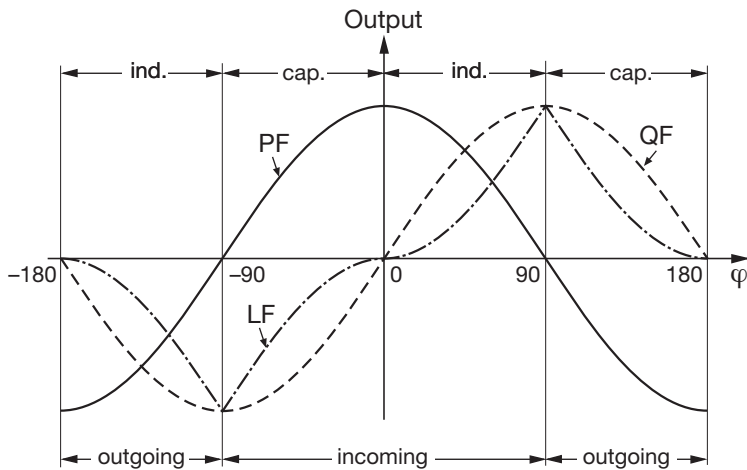


SINEAX DME 407 / 408

Energy Management in 3-phase Systems

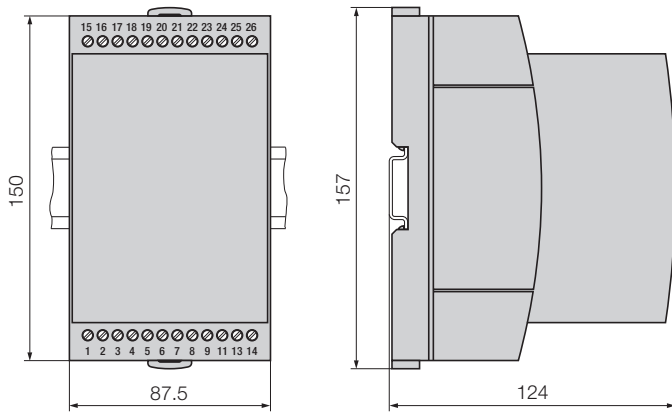Dimensioned drawings



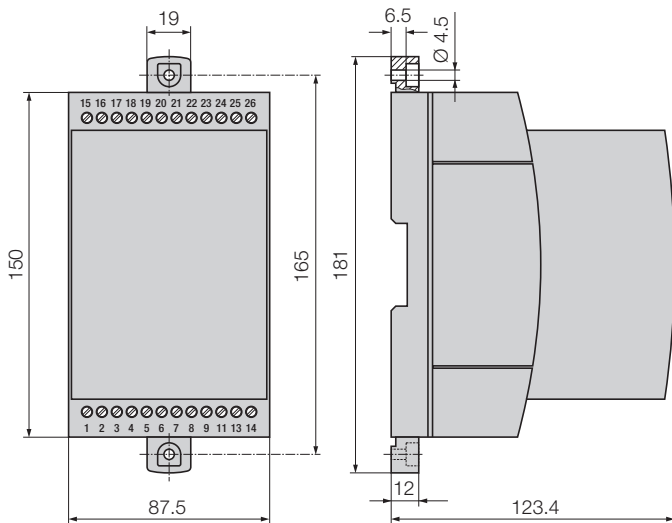SINEAX DME 4 in housing T24 clipped onto a top-hat rail (35 x 15 mm or 35 x 7.5 mm, acc. to EN 50 022).



SINEAX DME 4 in housing T24, screw hole mounting brackets pulled out.

Table 3: Accessories

| Description | Order No. |
|---|-----------|
| Programming cable | 980 179 |
| Configuration software DME 4 for SINEAX/EURAX DME 424, 440, 442, SINEAX DME 400, 401, 406 and 407/408 Windows 3.1x, 95, 98, NT, 2000 and XP on CD in German, English, French, Italian and Dutch (Download free of charge under http://www.camillebauer.com) In addition, the CD contains all configuration programmes presently available for Camille Bauer products. | 146 557 |
| Operating Instructions DME 407/408 Bd-e | 154 956 |
| DME 407/408 Bf-e | 154 964 |



| Description | Order No. |
|---|-----------|
| SINEAX A 200 | 154 063 |
| Interconnecting cable sub D 9 pol. male/male 1.8 m | 154 071 |